


Massaggio Conveniente

User manual

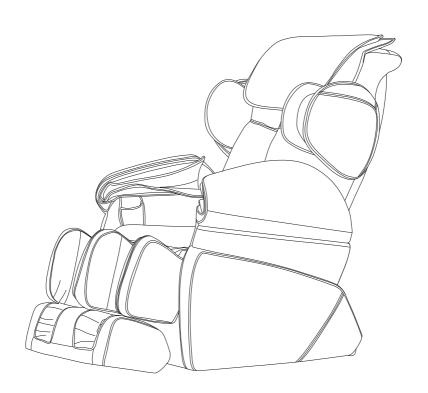

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

Safety and maintenance	02
Name and function of components	04
Function	05
Method of usage:	06
Product specification	13

Safety and maintenance

1. Important Safety Warning.



- Don't allow children to touch moveable part of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 20 minutes of usage each time is recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything into this product.
- Please don't fall asleep while using this product.
- Please don't use it if drunk or feel unwell.
- Please don't use it within one hour after having meal.
- Please don't make the massage function too strong for avoiding Injury.

2. Environment for usage.

- Please don't use it under high temperature and moist environment such as bathroom.
- Please don't use it immediately while the environmental temperature changes sharply.
- Please don't use it under heavy-dusty or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.

3. People who are not suitable to use this product.

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this
 product.
- People who got injured or skin disease are not suitable to use this product.
- Children under 14-year old or people mentally unbalanced without being Supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.

Safety and maintenance

4. Safety.

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.
- Don't make water go inside this product to avoid electric shock or cause damage to this product.
- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comeback suddenly.
- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Service agent or similarly qualified persons in order to avoid a hazard.


5. Maintenance.

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this
 product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.

6. Solution of ordinary malfunctions.


- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the poweroff button; If this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.

Name and function of components

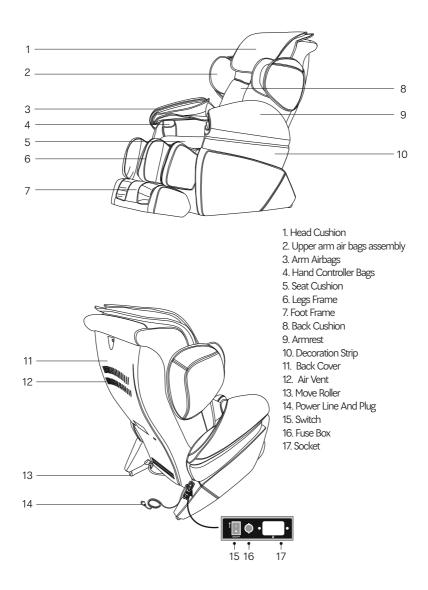

Function

- Designed with a set of four wheel driven massage mechanical hands which can move up and down in the black rest
- It can detect massage point on upper body, shoulder position automatically and adjust it.
- Programmed with five human simulating massage mode: shiatsu, kneading, flapping, knocking and synchronism with kneading flapping.
- Programmed with five auto massage modes: auto (overall, neck and shoulder, back and waist), ease, stretch
- Programmed with two memory functions: it can reserve the mode and the angle currently as you like, you can call out next time when you turn on the machine.
- Manual selection of position and mode of massage for upper body: the following
 three positions of massage may be selected: fixed point, partial, and whole range,
 there are five speeds for each massage mode. Under the massage of flapping,
 shiatsu and knocking, the width between the two massage hands can be adjusted
 in three levels of wide, medium and narrow. On partial and fixed point, the
 massage hands can move up and down to adjust the massage point accurately.
- Air pressure massage function with three modes: full body air pressure, lower body, arms, set with 41 airbags, three intensity optional.
- With buttocks vibration massage function, and the intensity is adjustable.
- The upper arm is added rotating function to meet different heights people
- Calf rest can extend stepless and turn over freely.
- Calf rest can be lifted separately or together with the backrest, the calf rest can auto segregate when run into barrier.
- Come to sitting up state and mechanical hands reset automatically when power off.
- Setting time 15, 20, 25, 30min, with 4 grade adjustable.

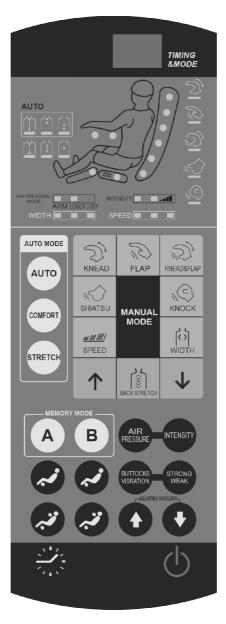

1. Switch on the power supply of the whole unit




$2.\ \mbox{Adjust}$ the angle of the backrest , footrest, and the retracted position of the foot pad

- Adjust the posture according to your requirement (don't adjust it in massage process)
- · Linkage lift adjustment

Button	Description
Sit up button: press this button, the backrest rise up slowly, calf rest de will stop when release the button. If you up to the top, It will stop autor and with alarm "di-di di"	
	Lie down button: press this button, the backrest decline slowly, calf rest rise up slowly, will stop when release the button. If you up to the bottom, it will stop au tomatically and with alarm "di-di di ······ "

 
· Calf rest angle adjust



3. Start to massage

- 1). Press the red button to start massage.
- 2). First detect shoulder position and massage point, there will be 'Di...Di...' signal after detection. Then the shoulder position can be adjusted and massage chair will automatically adjust to a certain angle. When detecting shoulder postion and massage point, you can choose memory mode (memo A and memo B) and automatic mode (auto, comfort and stretch) to enter relative massage mode (jump directly over step 3 and step 4), and the angle automatic adjustment will stop.
- 3). If the roller is not in shoulder position, you can adjust it by pressing up and down button, there are 6 levels.

Adjust the position of the massage balls upward to up to a suitable shoulder position.	SHOULDER POSITION ADJUST (UP BUTTON)	
Adjust the position of the massage balls downward to up to a suitable shoulder position.	SHOULDER POSITION ADJUST (DOWN BUTTON)	J.

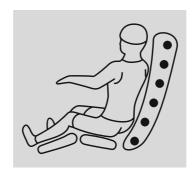

- 4) Default into ease mode, you can choose other massage modes to massage
- A. Characterized massage, upper body auto massage

Name	Button	Massage Content	Massage Feature	Display Status
Charac auto m	Memory Restore to the stored massage Status a to massage			
Characterized auto massage	MEMORY	Memory B Massage	Restore to the stored massage Status B to massage	
	Overall massage on upper body back and forth		AUTO (A) (A)	
Auto	АИТО	Neck and shoulder massage	massage focus on neck and shoulders	AUTO (A) (A)
Massi	Auto should be waited as seen a seen		massage focus on back and waist	AUTO (1) (2)
comfort Fine m		Fine massage	Promote blood circulation, loose bones and muscles	P1
	STRETCH	Stretch massage	Relieve fatigue, refresh yourself.	P2

- B. Upper body manual massage, lower body manual massage
- Upper body manual massage

Function	Button	Description	Display Status
	BACK STRETCH	Upper body (full cover) massage back and forth	<u>術</u> 所作
BACK STRETCH	BACK STRETCH	Extent (partial) massage back and forth	的 <u>的</u> 的
	BACK STRETCH	Ermanent position (fixed point) massage	价价值

Function	Button	Description	Display Status
Massage point adjust (in fixed point, partial	•	Massage hands move up	ij
modes, you can adjust the massage position)	•	Massage hands move down	Ä

Function	Button	Description, display status	Massage balls adjustment
	KNEAD	<u> </u>	Speed, intensity
Te	FLAP	Ď <u>V</u> Ď √ √	Speed, width, intensity
Technique	KNEAD& FLAP	<i>ŷ № ₩</i> *♦ *6	Speed, intensity
ue	SHIATSU	\$ 19 1\$ 1 <u>€</u> 16	Speed, width, intensity
	кноск	Ŋ ½ Ŵ ₩ <u>@</u>	Speed, width, intensity

Function	Button	Description	Display Status
SPEED	ss ## ##/	5 grades speed adjustable	SPEED 1 2 3 4 5
WIDTH		3 grades width adjustable	WIDTH Narrow Middle Width

• Lower body air pressure manual massage

Function	Button	Description	Display Status
A		Model 1, massage on arms, buttock, foot. 3 grades intensity adjustable	AIR PRESSURE MODE ARM LOWER BODY
Air pressure	Air pressure intensity adjustable	Model 2, massage on buttock, foot. 3 grades intensity adjustable	AIR PRESSURE MODE ARM LOWER BODY
re		Model 3, massage on arms, 3 grades intensity adjustable	AIR PRESSURE MODE ARM LOWER BODY
Intensity	INTENSITY	Air-pressure intensity: It has strong, middle, week 3 level of circulatory adjustment .	Strong

C. Other manual function

Function	Button	Description	Display Status
Buttocks vibration	BUILDOCKS VIDIATION TUNCTION SWITCH ONTION		
Strong weak	STRONG WEAK	Vibration Strong/ weak 2 options circular adjustment	Strong: LED ON Weak: LED flashing

Function	Button	Description	Display Status
Time setting		With 4 grades massage time adjustable: 15, 20, 25, 30min	88 _{MIN}

4. Turn off power, stop massage

- In massage process, press red button, or up to the setting time, all the massage function will stop, the displayer will displayed EE and with glitter, you can press the memory A or B to store the current massage status, in the displayer it will show the corresponding memory status E1 or E2
- Press the red button again, the whole machine will turn off, the massage hands, back rest and calf rest reset; or wait for 10 seconds, turn off automatically, the massage hands, back rest and calf rest reset.

NOTES

 
If the massage time is up, and without memory function, backrest and calf rest cannot restore automatically.

• Cut off the power of the whole machine Figure (figure of the power cut off).




5. Calf rest extend infinite or turnover freely

• Calf rest using extend infinite adjust function, fit for different heights using foot support turn over freely, massage on foot at any angle.




6. Upper arms installation

- Zipper the upper arms open which on the rear end, connect the air tubes between backrest frame and upper arms; insert the guide post on the upper arms into corresponding holes on the backrest frames, avoid to bending. (Figure 1)
- Pressing the upper arms and fixing it on the backrest frame with two screws, check the air tube whether it is bending and the zipper is pressing before it is fixed.(Figure 2)
- Pull zipper to the bottom, flapping the surface to make it smoothly(Figure 3).
- The installation finished. Note: do not yank, press and twist with force when using it. (Figure 4)

 



 

 


Figure 1


Figure 2

Figure 3

Figure 4


NOTES

- 1. When you stand up, cannot with your body press on the two sides top edge of armrest, see figure 1
- 2. Cannot press inward on the top edge of arm rest see figure 2
- 3. Cannot sit on the top edge of armrest see figure 3

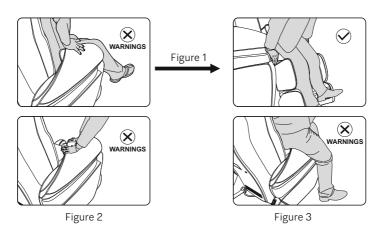

7. Pillow and backrest pad's dismounting and use manual.


Using pillows can reduce the kneading massage intensity on shoulder and neck, according to your needs to decide whether the pillow pad is needed (recommend head cushions). Backrest cushion and backrest connected by zipper (1), head cushion and backrest pad connected by thread gluing (2)

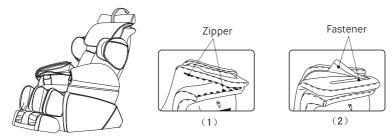

8.Floor Protection


Put the heavy massage chairs on the wood floor for a longtime may damage the floor, so please place a carpet or other object to avoid this damage.

Caution: Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair.

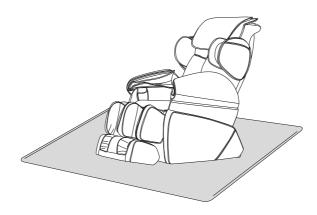

9. How to move the chair

Make sure wires are not in your way before you turn the back backward to a proper angle with the gravity center of the chair falls onto the casters. Then pull the chair forward or backward as you wish.

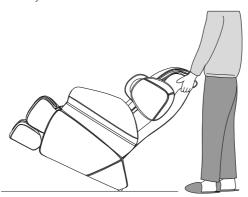

Product specification

Model: Massaggio Conveniente

Configure: 1

Name: Massage Chair

Rated voltage: 220-240V~ 50Hz/60Hz

Rated power input: 120W

Standby power: around 0.33W

Rated time: 15Min Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric & electron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD

SAVE THESE INSTRUCTIONS

Dear user, you can contribute to environmental protection.

Be environmentally responsible and return your used equipment to the relevant collection point designated by your local administration. The materials used to manufacture the device may be valuable recyclable resources and, if disposed of incorrectly, can pose a risk to the natural environment.

Remember - do not dispose of the device together with your household waste.

